

PRO No.	PART No.	ITEM
35	T LOOM DUAL STATION - 4172 V002	1) ITEMS 2 TO 8 ENGINE MOUNTED
36	DUAL STATION CONNECTING LOOM 4172 M002 7600 LONG	2) OIL PRESSURE-SENDER AND ALARM SWITCH
37	DUAL STATION CONNECTING LOOM 4172 M004 3000 LONG	3) OIL TEMPERATURE ALARM SWITCH 6.3544 OHM X
38	Hourmeter WIRING WITHOUT BULB	4) WATER TEMPERATURE ALARM SWITCH
39	Hourmeter WIRING WITH BULB	5) WATER TEMPERATURE SENDER
40	SOLENOID WIRING	6) STARTER MOTOR
41	NEUTRAL START SAFETY SWITCH WIRING	7) ALTERNATOR WITH TACHO 'W' CONNECTOR
42	COLOUR LODGE	8) THERMOSTART (12-VOLT)
43	RESISTANCE TABLE BATTERY CABLES	9) ITEMS 10 TO 14 LOOM MOUNTED
44	INSTRUMENT PANEL ASSY 12 VOLT WITH LOOM. AND DIODE PANEL PT. NO. 4171A022 ITEM 15-25 ARE CONNECTED AS FOLLOWS: ITEM 15 IS CONNECTED TO 12 VOLT WITH LOOM AND DIODE PANEL PT. NO. 4171A022 ITEM 017 AND 03544 AND PT. NO. 4171A022 ITEM 017 AND 03544.	10) STARTER MOTOR RELAY
45	INSTRUMENT PANEL ASSY 12 VOLT WITH LOOM AND DIODE PANEL PT. NO. 4171A022 ITEM 017 AND 03544 AND PT. NO. 4171A022 ITEM 017 AND 03544.	11) THERMOSTART RELAY
46	ITEM 16 OR 24 VOLT BULB CONNECTOR (NOT SHOWN - 420).	12) FAST FUSE
47	ALTERNATIVE AUXILIARY/ALTERNATOR/START START SWITCH (STANDARD, 2 - POSITION).	13) BULLET CONNECTOR 'B'
		14) BULLET CONNECTOR 'A'
		15) CHARGING LOOM - 4172H006 12 & 24 VOLT.
		16) ENGINE LOOM - 4172 V0009
		17) ITEMS 18 TO 30 PANEL MOUNTED
		18) WATER TEMPERATURE GAUGE
		19) OIL PRESSURE GAUGE
		20) TACHOMETER SEE NOTE
		21) AUDIBLE ALARM
		22) ALTERNATOR WARNING LIGHT
		23) WATER TEMPERATURE WARNING LIGHT
		24) OIL PRESSURE WARNING LIGHT
		25) OIL TEMPERATURE WARNING LIGHT (G.3544 OHM X) ONE BULB (4.236 ENGINE)
		26) VOLTMETER
		27) PANEL LIGHT SWITCH
		28) AUTO/HEAT/START SWITCH (4-TERMINAL, 4-POSITION)
		29) START BUTTON
		30) DIODE PANEL
		31) INSTRUMENT & ALARM PANEL LOOM - 4172 V002
		32) DUAL STATION PANEL LOOM - 4172 T003
		33) SINGLE STATION CONNECTING LOOM 4172 P002 7600 LONG
		34) SINGLE STATION CONNECTING LOOM 4172 P005 3000 LONG