

1. TO REMOVE CYLINDER FROM LOCK CASE

Unscrew the cylinder retaining screw.

Remove the key from the cylinder.

Depress the small plunger in the slot underneath the thumbturn, turn the thumbturn till the two gears can be seen in line with the opening in the lock case, remove the cylinder from the thumbturn side.

2. Fit the lock to the mortice with clear holes for the one piece cylinder and spindle.

3. TO ASSEMBLE CYLINDER TO LOCK CASE

Remove key from cylinder.

Depress plunger as above and turn the thumbturn till the gears are in line.

With the dead bolt in the unlocked position, insert the cylinder through the lock, holding the thumbturn end, to suit the hand of door.

Replace cylinder retaining screw.

IMPORTANT

Turn thumbturn towards fore-end, until plunger shoots out and gear is engaged.

If turned in the opposite direction this limiting plunger will not allow correct engagement of the gears, and lock will not work. To correct this depress the plunger and turn gear in the correct direction.

PLEASE NOTE :-

With double cylinder and indicator cylinders it will also be necessary to align the gears before the cylinder can be removed from the lock case or replaced.