


Mainship®

Corporation

T R A W L E R S

AN EMPLOYEE OWNERSHIP COMPANY

35 TRAWLER RIGGING INSTRUCTIONS

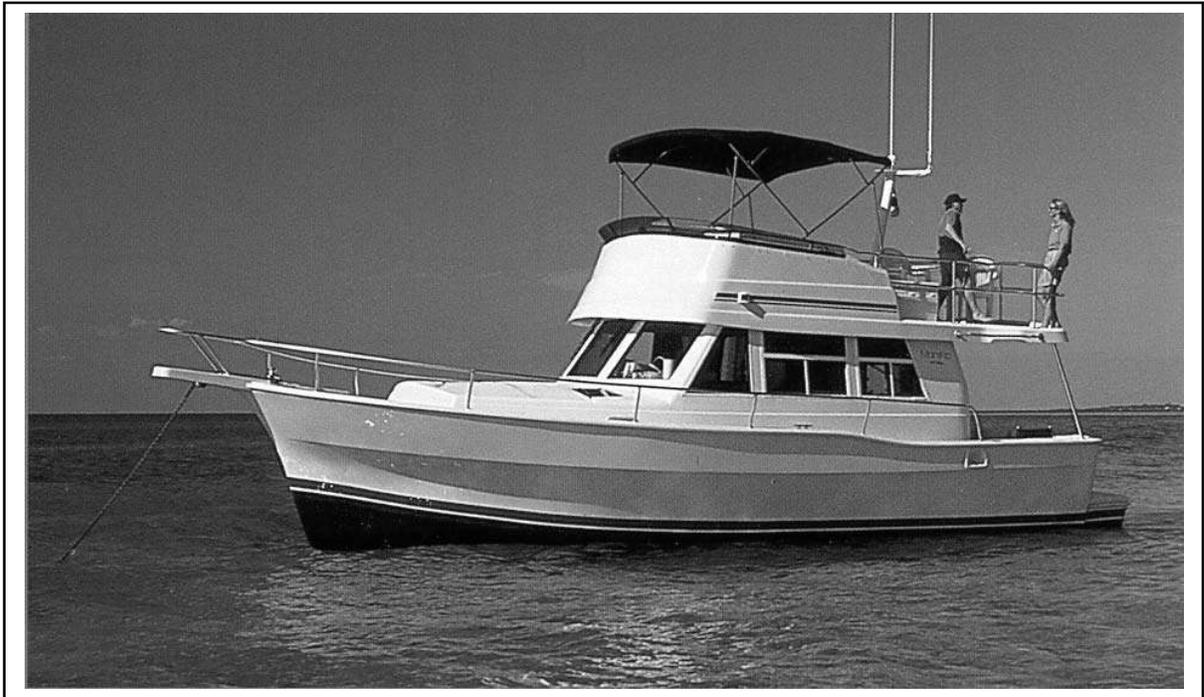


INDEX

Fly Bridge Rigging Instructions	3
Upper Bridge Railing Installation	5
Upper Bridge Table Installation	8
Mast Installation	9
Windscreen Installation	10
Upper Bridge Cushions, Upper Helm Seat, and Steering Wheel Installation	11
Shifter Line Installation	12
Throttle Cable Installation	14
Steering Head	16
Upper Bridge Wiring	17
Garboard Drain Plugs, Anchor, Miscellaneous Installations	18
Propeller Installation	19
Shaft Coupling Information	21
Batteries, Trim Tab Information, Launching Boat	22
Fluid Levels, Fueling Information, Starting Engines	23
Test Running Boat, Ground Fault Circuit Interrupter,	24
Systems Function Testing,	25
General Information	26
Rigging Kit Supplies	27


INSTALLING FLY BRIDGE

- A. Position fly bridge into embossment on hard top. Run a bed of 3M-5200 between fly bridge and hard top. Make sure fly bridge sits flat on receiver. (See figure #2)
- B. Using 3M-5200 sealant on each screw secure fly bridge to hard top using #8 – x 1” oval head screw with finish washer supplied in loose gear bag. **Note;** Fly bridge is pre fit at factory and holes are pre drilled. (See figure’s 3 & 4 on page 3).
- C. After all screws are in place seal fly bridge and hard top with 999 sealant compound supplied. (See figure #9 on page 6).

Note: Luhrs-Mainship Corporation will not be held responsible for any damage caused by water penetration from dealer installed items.

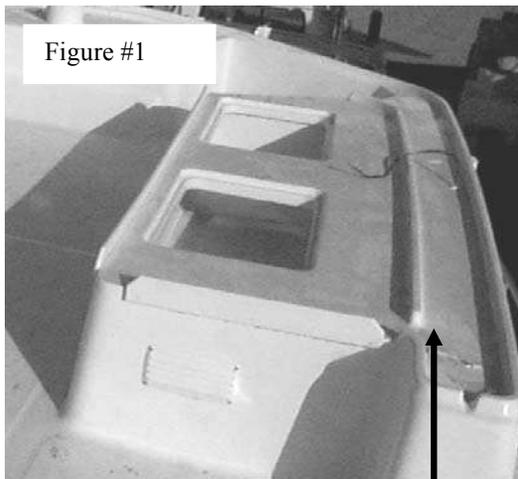

View of hard top embossment, before fly bridge is installed.

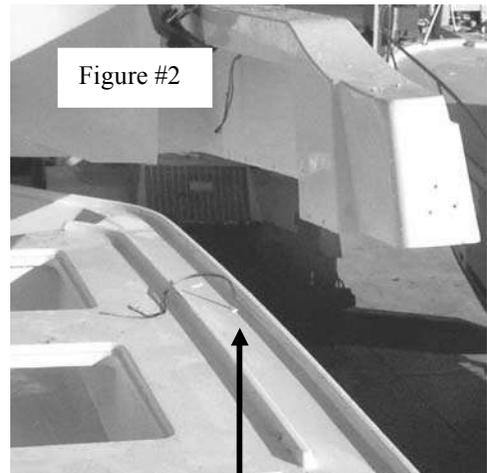

Set fly bridge down on hard top embossment; make sure that fly bridge sets flat.